



Insert the black Allen key into the hole at the top left of the kiosk enclosure and hold down until the screen comes on.




Initial Setup: Connecting to Your WiFi

1. After powering on the device, locate the “Settings” app (a blue gear icon).
2. From there, tap on “Connections” on the left side.
3. Then, Tap on “Wi-Fi” on the right side and connect to your network.
4. You are now ready to enter Kiosk Mode.

How to Enter Kiosk Mode


1. From the homescreen, tap on the “Kiosk Browser” app.
2. From there, a “Select launcher” menu will appear. Tap on “Kiosk Browser”:

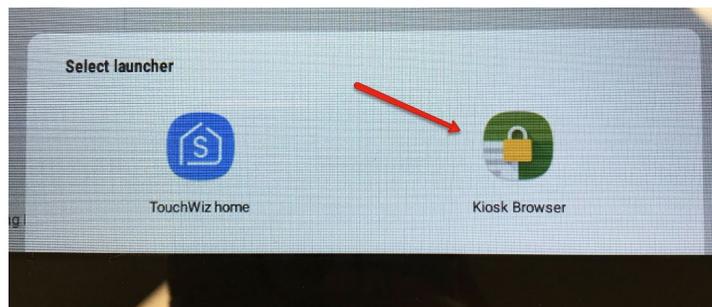


3. You will now be in kiosk mode and are ready to give. Enjoy!

How to Exit Kiosk Mode/Power OFF Your Device

1. Pull/swipe down from the top of the device and you will see a green bar appear with three vertical dots in the top right corner of the screen:

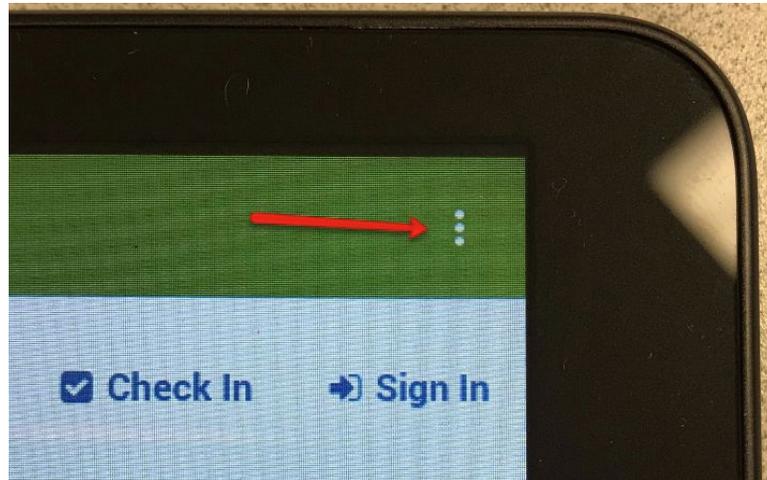

2. Tap on the dots and select "Exit to Launcher":

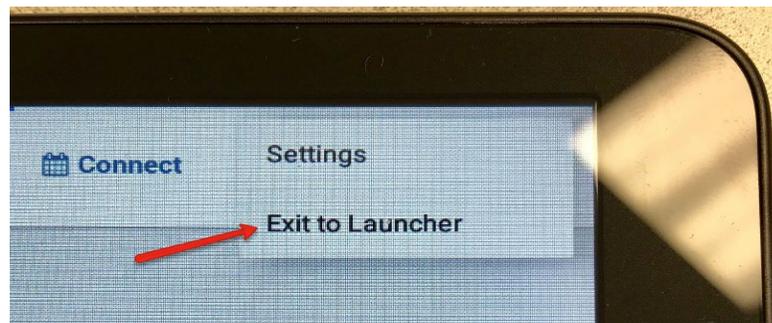

3. The password is 0424
4. After exiting, the "Select a launcher" menu will appear. Tap on "TouchWiz home".
5. You can now power OFF the device by holding down the power button on the side of the tablet.