


KIOSK SETUP INSTRUCTIONS


- 1.) Insert the black Allen key into the hole at the top left of the kiosk enclosure and hold down until the screen comes on.




- 2.) Swipe up on the screen and enter the KioskSimple Limited password: KS2015Pwd!
- 3.) Tap on the internet/WiFi icon at the bottom right hand of the screen.

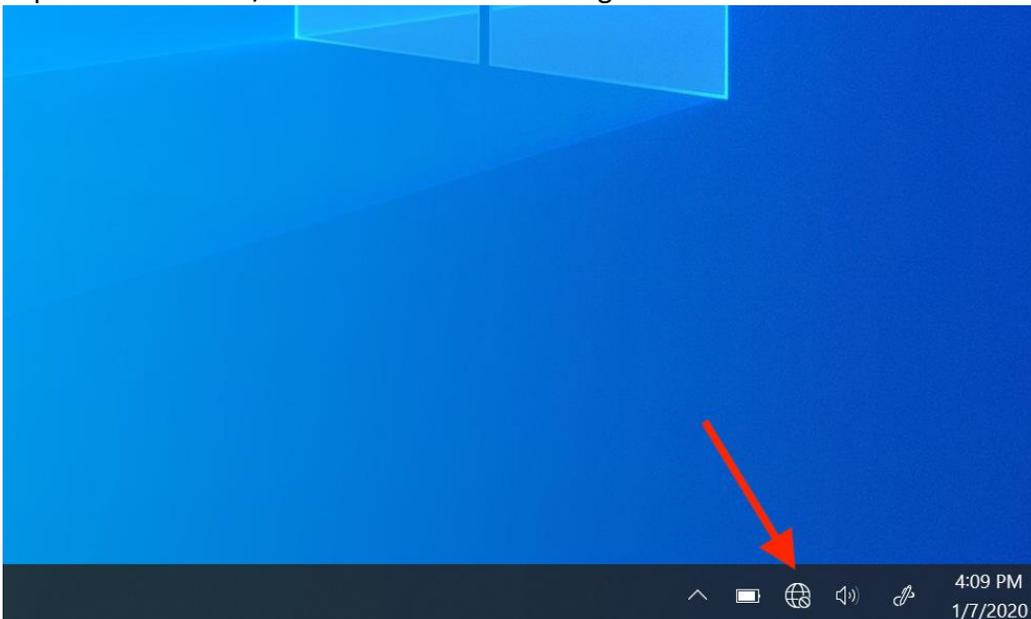

***VERY Important* – Please make sure you select “Connect Automatically” when choosing your WiFi network.**

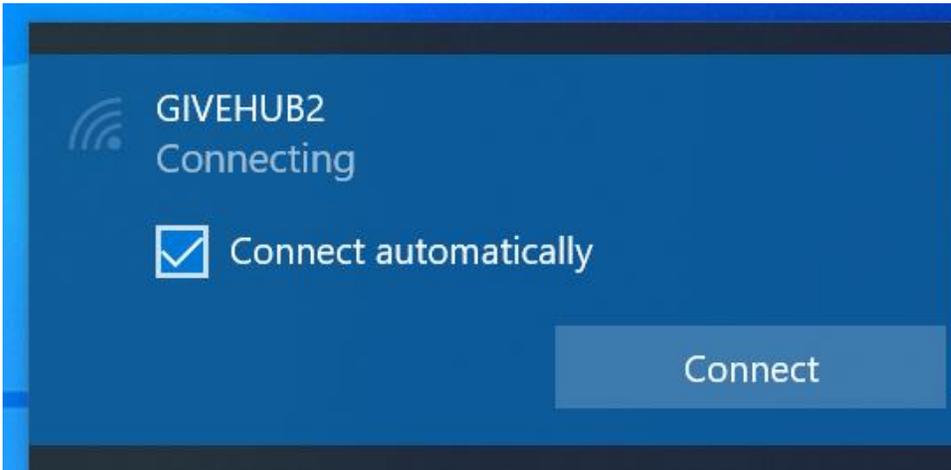


4.) When the password field appears, you will need to select the keyboard icon in the task bar below:

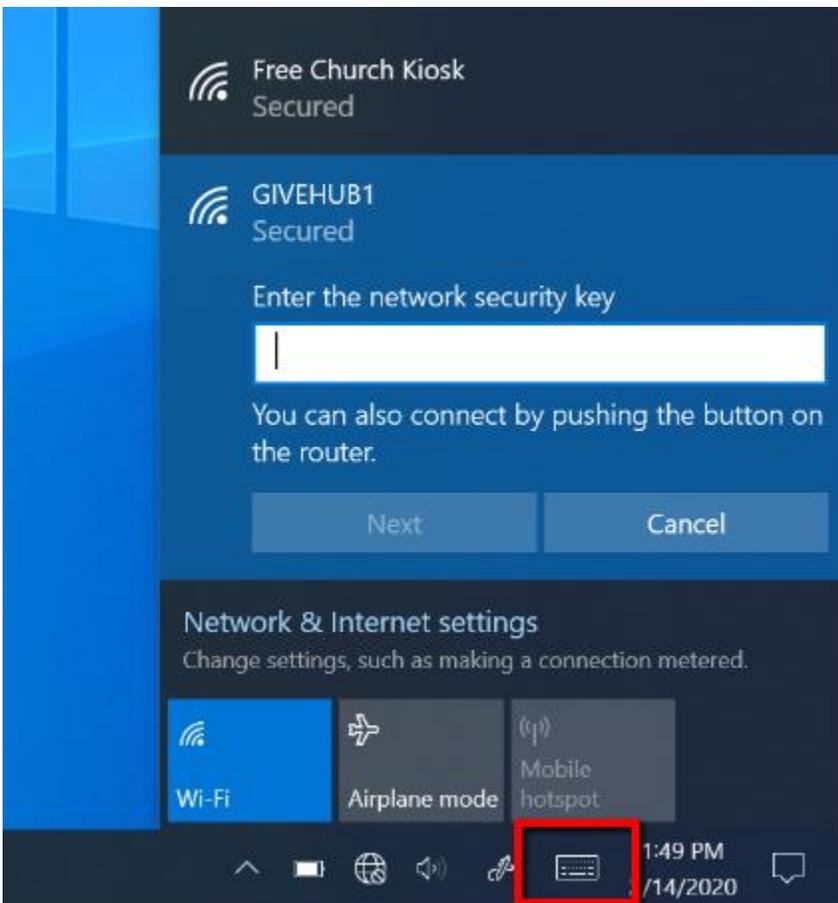


Now enter your WiFi password.

5.) Once connected to WiFi, Double tap on “Start Kiosk Simple”

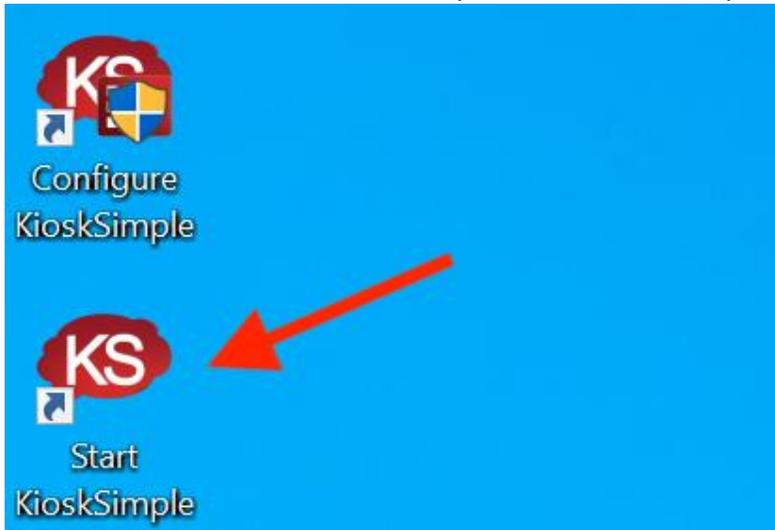

6.) Tap the red text that says “**Lockdown Kiosk**” and then tap YES.

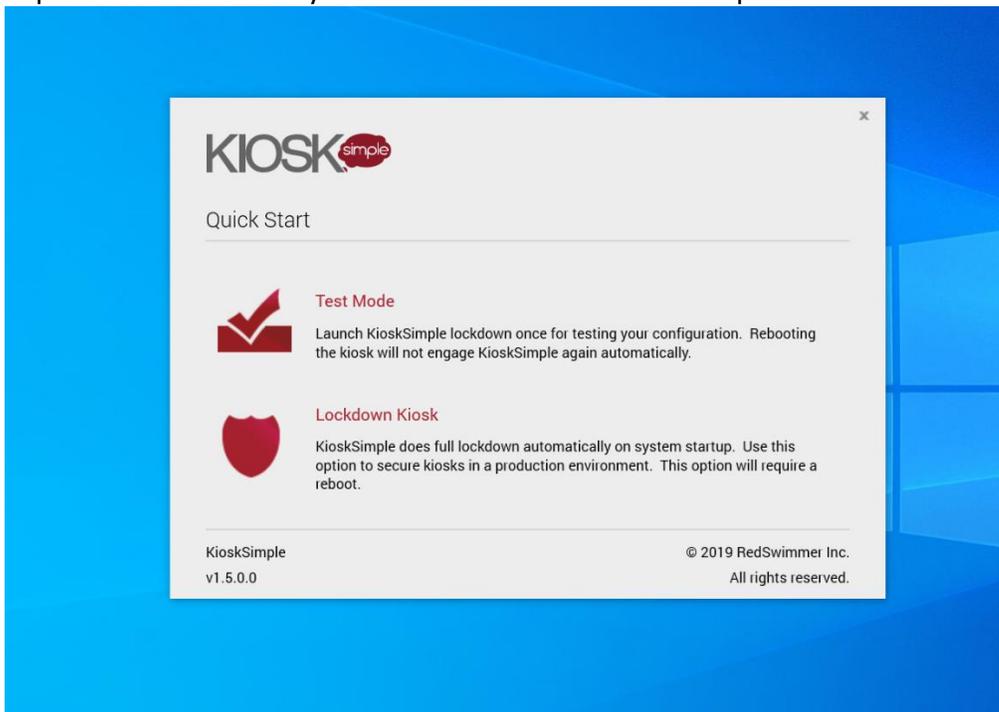

7.) The kiosk will then restart. Once it restarts, your giving page will automatically load, and your kiosk is ready to use!

Special Notes on next page...

Note: Please see picture below for the correct way to swipe a card.



Note: On the payment methods screen, if the NAME ON CARD field is not selected please tap into the Name on Card field to select it. Then you can swipe the card.



Turning Off Your Kiosk

- 1.) Tap the &123 button on the keyboard and tap on the ESC button on the right side.
- 2.) Enter in the password: 0424 into the password line.
- 3.) Then click "Login"
- 4.) Now click "Close Kiosk Simple".
- 5.) You can then power off the kiosk using the black Allen key provided, or the Windows button in the bottom left corner.